Biometric Safe Box(EZ Series)

Use Manual



Before You Begin:

Please read this manual before using the product. It will provide a detail -ed introduction and operation steps of this product. If you have any other questions, Please contact us via email, our customer service team will do their best to serve you!

After Sales Email: support@homesafe.vip

CONTENT

CONTENT & PRODUCT OPERATION VIDEOS ---------- 01

PRECAUTIONS ---------- 02

EXTENDED WARRANTY SERVICE ---------- 03

ACCESSORIES & PARTS LIST ---------- 04

COMPONENT DESCRIPTION ---------- 05

HOW TO UNLOCK THE SAFE ---------- 06

HOW TO SET YOUR PASSWORD & FINGERPRINT ---------- 07

OTHER FUNCTION & SECURE THE SAFE TO A FLOOR OR WALL ---------- 08

• PRECAUTIONS

Thank you for choosing EZ Safe to store all your important documents and valuables.
We hope that this product will help you stay organized and provide you with the peace-of-mind of knowing the things most important to you are protected.

⚠ SAFETY INFORMATION

01 Before using this device, please read this user manual carefully.

02 Understand and follow the safety and operating instructions to avoid potential risks and hazards.

03 Keep this manual for future reference. If you hand over this device to someone else, be sure to provide them with this user manual as well.

04 Do not leave safe unattended while open. Keep Children Away from safe.

05 Always lock and secure the safe when not in use. Store the backup keys in a secret and secure location not in the safe.

06 Remember to record the keyhole serial number and order ID of your safe. You will need it for all warranty or customer service inquiries.

07 Never attempt to dismantle the product by yourself. If maintenance is required, please contact us via the Email.

⚠ IMPORTANT WARNING

01 The front control panel of the safe requires **1.5V AAA batteries**, while the battery compartment on the inner back of the safe adopts **1.5V AA batteries**. Please note the two specifications are different. The dual battery specifications provide you with more product compatibility and battery options.



02 If you think that the batteries have been swallowed or entered any part of the body, seek medical attention immediately.

03 Keep new and used batteries out of the reach of children.


04 If the battery compartment doesn't close properly, stop using the product and keep it out of the reach of children.


• ACCESSORIES & PARTS LIST


Please carefully check the quantity of accessories after receiving the product. If there are any missing accessories, please contact us, our customer service team will reply promptly.


Item	Picture	Qty
Safe Box		1
Spare Key		2
Charging cable		1
Use Manual		1
Mounting screws		4

• COMPONENT DESCRIPTION

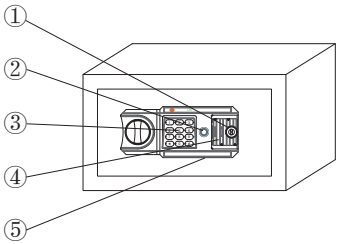

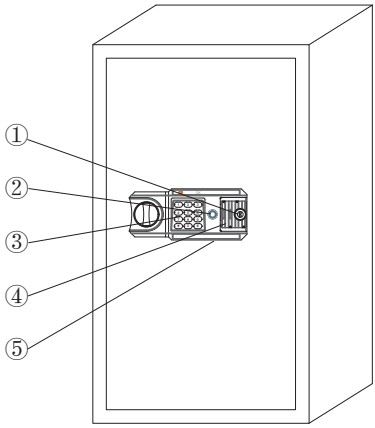

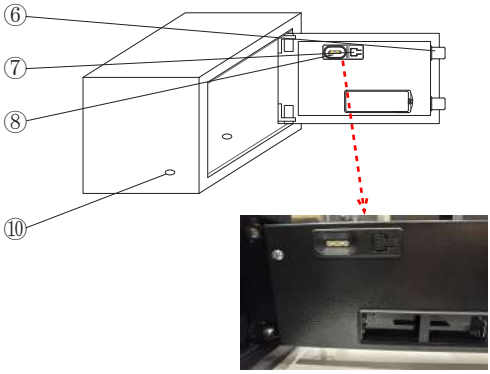

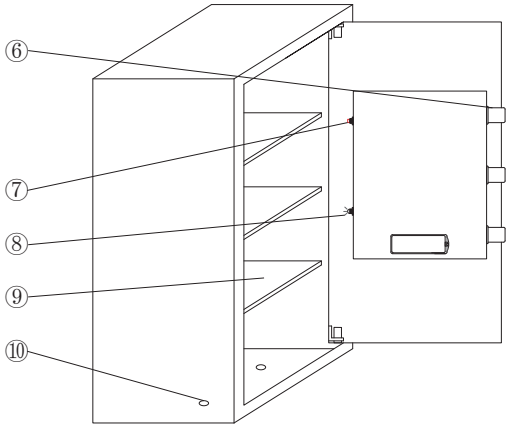


Small Size(EZ Series)

Large Size(EZ Series)

①Key Hole
②Fingerprint Lock
③Numeric Keypad
④Battery Compartment
⑤Type-C Interface
⑥Steel Bolts
⑦Reset Button
⑧Inner Sensor Light
⑨Removable Shelf(Small size safe without Shelf)
⑩Pre-drilled Hole(For fixing and anti-theft)


• HOW TO UNLOCK THE SAFE

1.Key Unlocking(Initial Use)

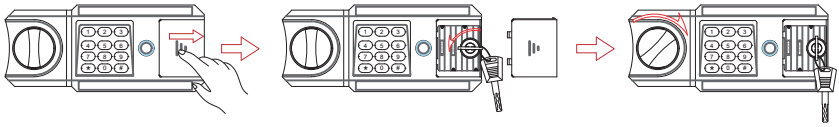

①Locate the spare key from the accessories. Slide the battery cover to the right, insert the key into the keyhole, then rotate it counterclockwise to the vertical position;
②Rotate the left knob clockwise horizontal, then pull open the door.

2.Password Unlocking

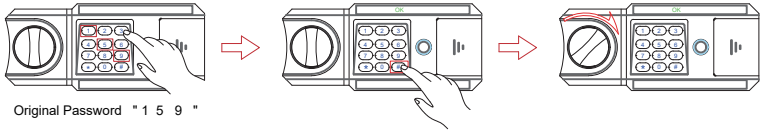


①Slide the battery cover rightward, insert batteries with correct polarity, then close the cover;
②Enter default factory code 159 and press "#" to confirm. Unlock successfully once the screen shows OK;
③Rotate the left knob clockwise horizontal, then pull open the door.

※ The default password: 159#


3.Fingerprint Unlocking


（No default fingerprint preset; Set your fingerprint first before use）



①Slide the battery cover rightward, insert batteries with correct polarity, then close the cover;
②Place your finger on the fingerprint sensor and hold for a moment； Unlock successfully once the screen shows OK;
③Rotate the left knob clockwise horizontal, then pull open the door.

※ Power Supply Options

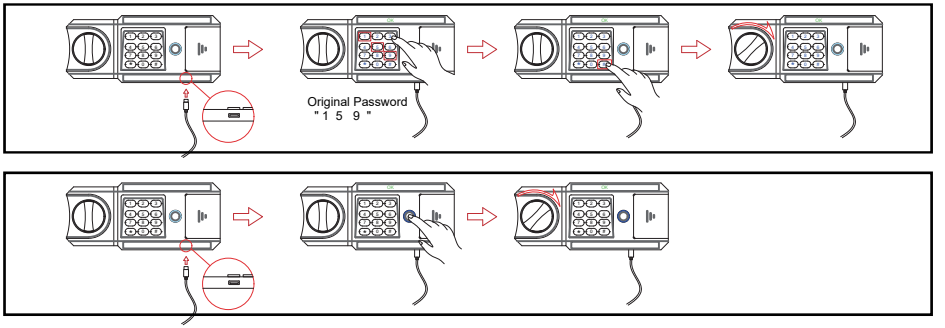

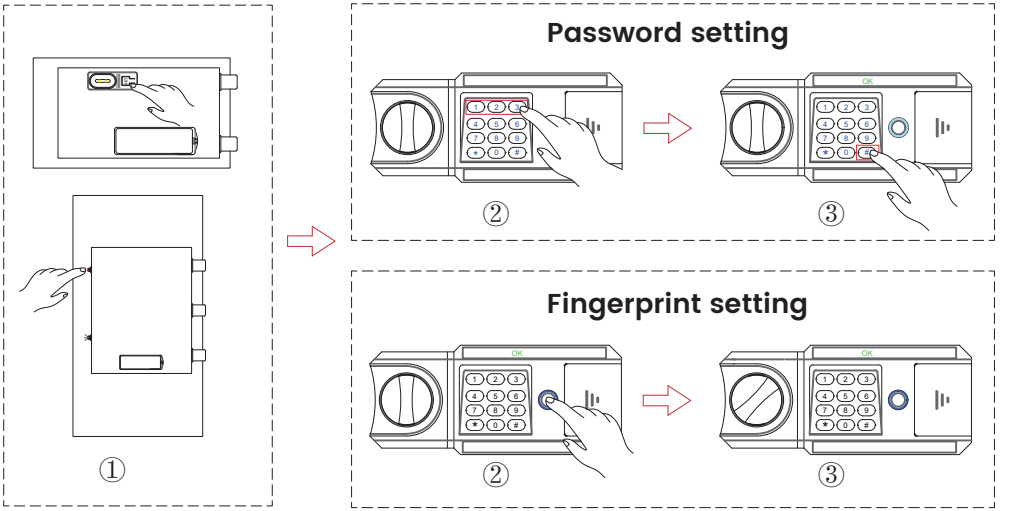

step 1

With the door opened, press the reset button behind the door, the keyboard backlight and fingerprint button will light up blue;

step 2

Password Settings: Enter 3-8 digits and press "#" to complete the entire process.
Fingerprint settings: Press your finger on the fingerprint sensor **five times**. Each press triggers one beep. The setup succeeds once "OK" shows on the display after the last press.

• OTHER FUNCTION

1.Smart Alert System

·Wrong password alert


Six wrong entries(password or fingerprint)will lock the safe for 20s, and the buzzer will beep.

2.Mute Function


Long press "1" key for 5s to turn on the mute mode

Long press "1" key again for 5s to turn off the mute mode


• SECURE THE SAFE TO A FLOOR OR WALL

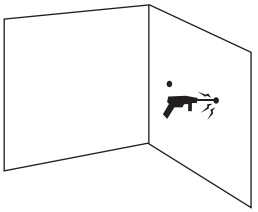

STEP1

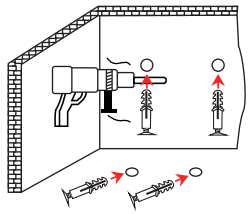

STEP2

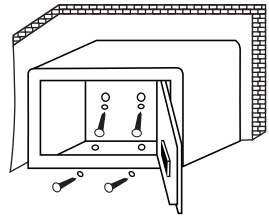

STEP3

①Drill the appropriate size holes for the anchors you are using.

②Carefully press the anchor into the holes at this time.

③Mount the safe by running screws from inside of the safe and securing to anchors. Ensure the safe is mounted securely.